Design Number 3MU/AF 60-07 APPLIED FIREPROOFING 3M Company

3M™ Interam™ E-5, E-54-A and E-5A-4 Series Endothermic Mat 3M™ Fire Barrier CP 25WB+ Caulk


IEEE 848

Ampacity Derating:

1 in. conduit - 8%

4 in. conduit - 9%

Reference Intertek Design Listing 3MU/AF 60-03 for Fire Resistance Ratings

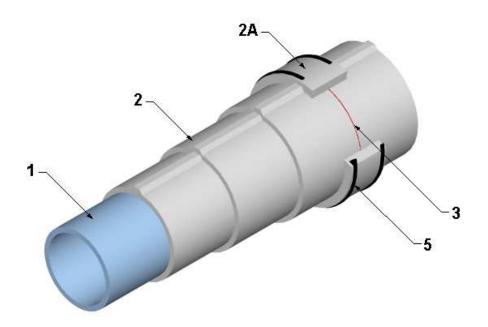

Intertek

- 1. CONDUIT: Use minimum 1 in. (or larger) rigid galvanized steel conduit.
- 2. CERTIFIED MANUFACTURER: 3M Company

CERTIFIED PRODUCT: Applied Fireproofing

MODEL: $3M^{TM}$ Interam TM E-5, E-54-A and E-5A-4 Series Endothermic Mat

ENDOTHERMIC MAT: Install 4 layers of foil faced flexible mat tightly around the conduit (Item 1). Install each piece of mat with a minimum 2 in. overlap onto itself and temporarily hold in place using filament tape if needed.

A. COLLAR: Install nominal 4 in. wide strip of endothermic mat (Item 2) around outer layer of the wrapped

conduit (Item 1). Center collar over butt joints over outer layer and secure using steel banding (Item 5).

3. CERTIFIED MANUFACTURER: 3M Company

CERTIFIED PRODUCT: Caulk or Sealant

MODEL: 3M™ Fire Barrier CP 25WB+ Caulk

CAULK: Install caulk between butt joints of endothermic mat (Item 2) on all layers. Alternative use is to fill gaps and voids along seams greater than 1/8 in. wide.

4. TAPE: (Not Shown) Apply 4 in. wide pressure sensitive tape with aluminum foil facing to all exposed edges of the

©Intertek

Date Revised: August 30, 2012 Project No: 100792969SAT-001J

Page 2 of 2

collar (Item 2A) as well as the longitudinal (overlap) joints of the endothermic mat (Item 2) on the outer layer.

STEEL BANDING: Install 1/2 in. wide x 0.020 in. thick stainless steel banding on the outer layer of the endothermic mat (Item 2). Install banding within 1 in. of the edge of collars (Item 2A) and butt joints and maximum 12 in. oc at all other locations.

Date Revised: August 30, 2012 Project No: 100792969SAT-001J

