


L-Rating <1.0 SCFM/LF

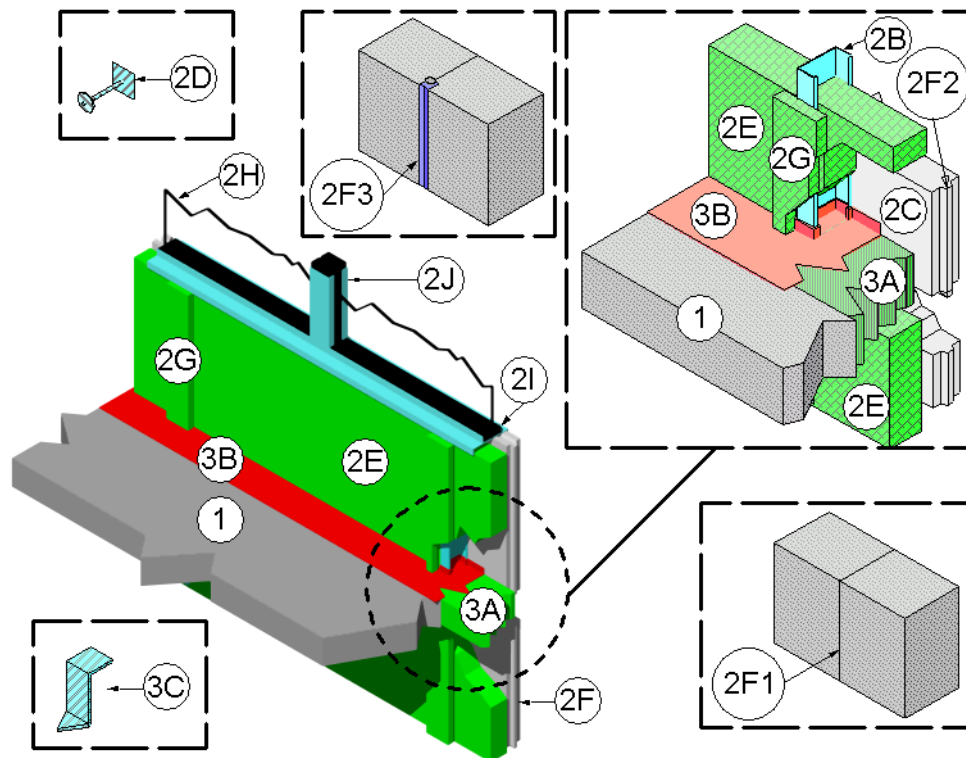

- to contain an architectural joint system.
increase concrete floor assembly
thickness to maintain a minimum
thickness of 4-1/2 in. and accommodate
depth of blockout formed in the
concrete: blockout width unrestricted.

07-84-00 Firestopping**07-84-53 Building Perimeter Firestopping**

2. CURTAIN WALL ASSEMBLY:
Incorporate the following construction features:

- A. Mounting Attachment: (Not shown)
Attach steel stud framing (Item 2B) to the structural framing according to the curtain wall manufacturer's instructions. When required, connect the mounting attachments to the joint face of the concrete floor assembly (Item 1) according to the curtain wall manufacturer's instructions. Limit distance between mounting attachments to maximum 120 in..
- B. Steel Stud Framing: Use minimum 3-5/8 in. by 1-5/8 in., 18 GA, C-shaped steel studs as interior vertical framing. Attach according to the curtain wall system manufacturer's guidelines. Limit distance between steel stud framing to maximum 60 in.. When required, install horizontal steel stud framing members according to the curtain wall system manufacturer's guidelines and, in the spandrel area, locate a minimum of 33 in. above the top surface of the concrete floor assembly (Item 1).
- C. Concrete Panels: Use any non-combustible exterior concrete based panels. Use minimum 1-1/2 in. thick, 12 in. high, 12 in. long panels. Attach concrete panels to steel stud framing (Item 2B) according to the curtain wall system manufacturer's requirements. Option – Treat the exterior side of the concrete panels with any weatherproofing material Listed as a Class 1 material in accordance with ASTM E-84. Use only Intertek certified products meeting these minimum requirements
- D. Impaling Pins: (Optional) Use, locate, size, and install impaling pins according to the curtain wall system manufacturer's guidelines.
- E. Curtain Wall Insulation: (Optional) When used, install either mineral wool or fiberglass batt curtain wall insulation after the perimeter joint protection (Item 3) without deforming it. Attach curtain wall insulation to steel stud framing (Item

2B) by friction fit or mechanical fasteners.

- F. Concrete Panel Joint: No through joints allowed. When required, the surface of the concrete panel joints can be sealed with gaskets or sealants. Use one of the following for vertical and horizontal concrete panel joints:

- I. CERTIFIED MANUFACTURER:
3M Company
CERTIFIED PRODUCT: Fire Barrier™ Sealant
MODEL: CP25WB+

Flush type (butt joint) (Item 2F1), Prefer butt joints but allow a maximum 1 in. joint width for vertical and horizontal concrete panel joints. When through void or space exists between panels, the void in the spandrel region must be treated by packing a minimum 4 pcf density, mineral wool into the joint to a minimum 33% compression (1-1/2 times width of opening), filling the entire void or space. Recess the mineral wool a minimum of 1/2 in. from each side of the wall. Install a minimum 1/2 in. thickness of 3M CP25WB+ firestop caulk on the internal surface of the wall assembly (Item 2). Use only Intertek certified products meeting these minimum requirements

- II. key way type (tongue and groove) (Item 2F2), or
- III. recessed (Item 2F3).
- G. Framing Covers: (Optional) When used, locate, size, and install framing covers according to the curtain wall system manufacturer's guidelines. Do not pass framing covers through the perimeter joint protection (Item 3). Allow framing covers to abut top and bottom surfaces of the perimeter joint protection (Item 3) provided that no deformation occurs.
- H. Glass Vision Panels: When required, use optional glass vision panels a minimum 33 in. above the top surface of the floor assembly (Item 1). Install glass vision panels

07-84-00 Firestopping**07-84-53 Building Perimeter Firestopping**

to curtain wall framing according to the curtain wall system manufacturer's guidelines. Use a minimum 1/4 in. thick, clear tempered glass with a nominal width and height as determined by the framing.

- I. Window Gaskets: When optional glass vision panels used, secure glass vision panels with a thermal break (thermo-set rubber extrusion).
- J. Window Framing: When glass vision panels used, use steel framing members a minimum 3-5/8 in. by 1-5/8 in., 18 GA steel, U-shaped channel or similar construction compatible with structural framing (Item 2B). Locate window framing at least 33 in. above the top surface of the floor assembly.

- 3. PERIMETER JOINT PROTECTION: Do not exceed an 8 in. nominal joint width (joint width at installation). Incorporate the following construction features for the perimeter joint protection (also known as perimeter fire barrier system):

- A. Packing Material: Use a minimum 4 in. thick, 4-pcf density, mineral wool batt insulation installed with the fibers running parallel to the edge of concrete floor assembly (Item 1) and curtain wall assembly (Item 2). Cut packing material width to achieve required compression, refer below, when installed in the nominal joint width. Compress the packing material into the perimeter joint. Tightly compress together splices (butt joints) in the lengths of packing material by using minimum 1/4 in. compression per piece of packing material. When a spray coating is used, locate the top surface of the packing material flush with the top surface of the concrete floor assembly (Item 1). When the non-sag or self leveling silicone sealant is used, recess the top surface of the packing material 1/4 in. from the top surface of the concrete floor assembly (Item 1). Use only Intertek certified products meeting the above minimum requirements.

- I. When 50% compression is required cut the width of the

packing material 2 times wider than the nominal joint width.

- II. When 33% compression is required cut the width of the packing material 1.5 times wider than the nominal joint width.
- III. When 20% compression is required cut the width of the packing material 1.25 times wider than the nominal joint width.

- B. CERTIFIED MANUFACTURER: 3M Company

CERTIFIED PRODUCT: FireDam™ or Fire Barrier™

MODEL: FD Spray 200 (Elastomeric, Sprayable) or FB 1000 N/S Silicone Sealant (Non-sag) or FB 1003 S/L (Self Leveling) Sealant

Fill, Void or Cavity Material: Apply either spray coating or non-sag or self leveling silicone sealant over the packing material (Item 3A) as follows:

Spray Coating – Spray apply the liquid to cover the exposed top surface of the packing material (Item 3A) compressed and installed in the perimeter joint. Apply a minimum wet film thickness of 1/8 in. and overlap the spray coating a minimum 1/2 in. onto the adjacent curtain wall assembly (Item 2) and concrete floor assembly (Item 1). When the spraying process is stopped and the applied spray coating cures to an elastomeric film before installation process is restarted, then overlap the edge of the cured spray coating at least 1/8 in. with the liquid spray coating.

Sealant – Apply non-sag or self leveling sealant to cover the exposed surface of the packing material (Item 3A) compressed and installed in the perimeter joint. Apply minimum 1/4 in. thickness non-sag or self leveling sealant over the packing material (Item 3A) and finish flush with the top surface of the concrete floor assembly (Item 1).

07-84-00 Firestopping

07-84-53 Building Perimeter Firestopping

- C. Support Clips: (Optional)
Recommended for installations
subject to vertical shear movement.
Use standard 20 GA galvanized
steel Z-shaped clips having the
following nominal dimensions: 1 in.
wide by 3 in. high with a 2 in. upper
leg and a 3 in. lower leg.