

Kingspan Insulated Panels, Inc.
Design No. KIP/MRP 60-02
Ceiling Assembly
K-ROC FX Fire Rated Panels
ASTM E119 and CAN/ULC-S101
Rating: 1 Hour
Superimposed Load: None

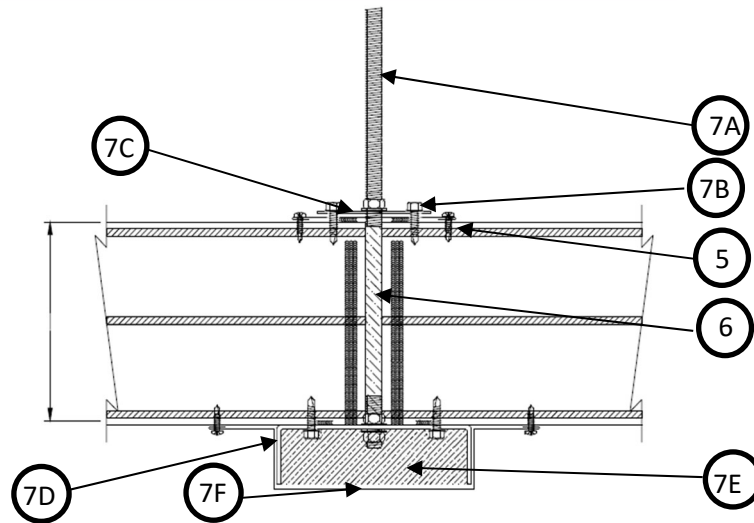


Figure 1: Butt Joint W/Hanger

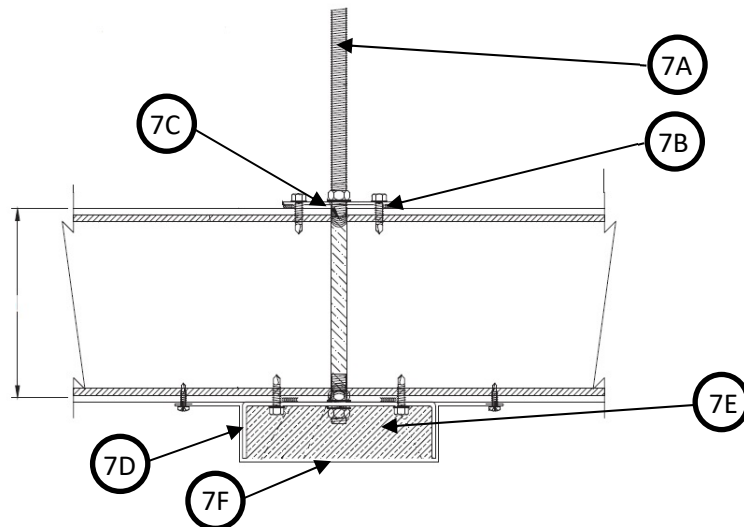


Figure 2: Mid-Panel W/Hanger

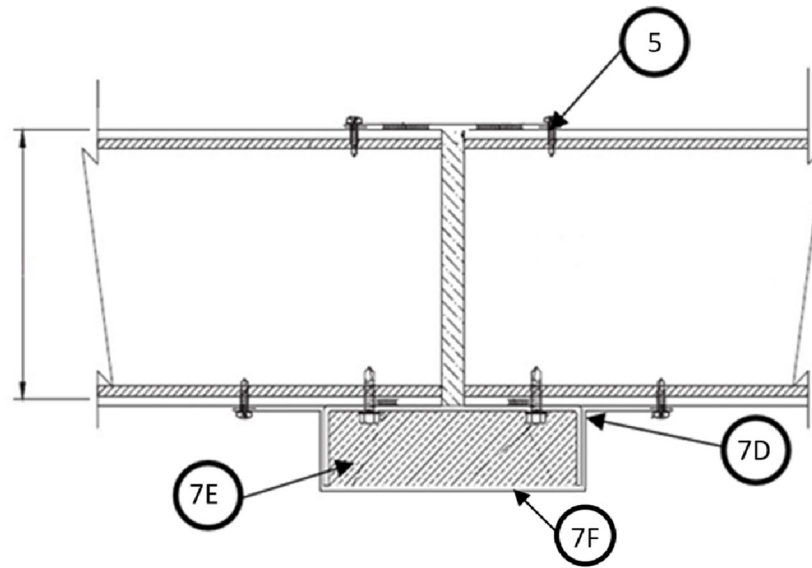


Figure 3: Butt Joint W/No Hanger

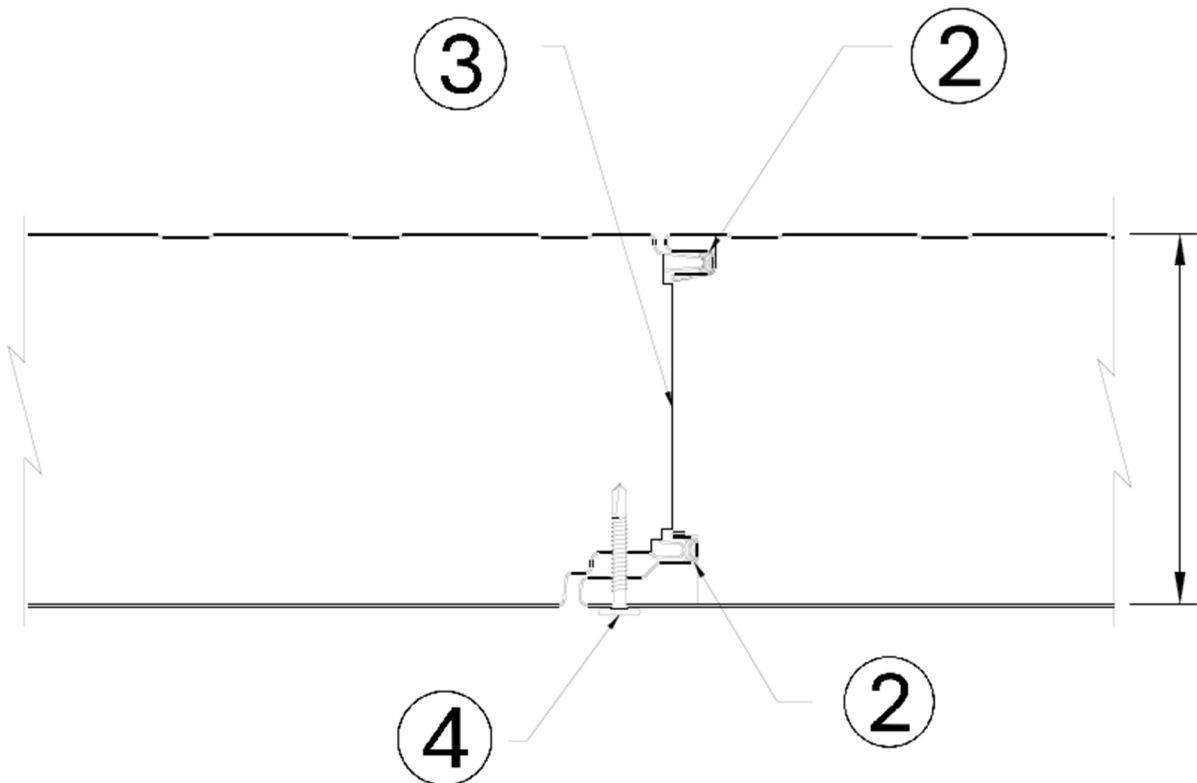


Figure 4: Interlocking Panel Joint



1. INSULATED METAL PANEL:

CERTIFIED PRODUCT: Kingspan Insulated Panels, Inc., K-ROC FX Fire Rated Insulated Metal Panels

Install nominal 6 in. thick x 42 in. wide Kingspan K-ROC FX Panels w/min. 24/26 GA (ext/int) steel skins, horizontally using the mounting attachments (Item 7). The max. span between butt joints is 12 ft. Refer to **Figures 1 and 3** for butt joints, and **Figure 4** for interlocking joints.

2. SEALANT: Apply a bead of non-skinning butyl sealant at the top and bottom joints of the interlocking edges of the insulated metal panels.

3. INTUMESCENT: Refer to **Figure 4**. Use Promat Promaseal®-LW intumescent tape with the widths described below.

A. 4 in. Panel – 50 × 1mm

B. 6 in. and 8 in. Panel – 60 × 1mm.

4. INTERLOCKING JOINT PANEL SCREWS: Install No. 14-13 × 1-1/2 in. long pancake-head screws to the underside (exposed side) of the panels. Space screws 36 in. on center (oc) along the length of the interlocking joints of the insulated metal panels.

5. BUTT JOINT PANEL SCREWS: Install No. 10 × 3/4 in. long hex-head screws spaced at 12 in. oc at the end of the panels at the butt joints on the top (unexposed) surface of the panel joints.

6. BUTT JOINT PACKING MATERIAL: Install 1/2 in. thick × 6 in. wide nominal 8.5 pcf density strips of Roxul mineral wool at the end (butt) joints of the panels prior to securing cover trim.

7. MOUNTING ATTACHMENTS: Use the following items to secure the insulated metal panels:

A. **THREADED ROD** – Install 3/8 in. diameter threaded rod and secure to structural member (not shown), spaced a max. of 42 in. oc. Secure threaded rod to mounting attachments using 3/8 in. nuts. The max. hole diameter for the rod installation shall be 1/8 in. greater than the rod diameter. Threaded rod shall be installed between the panel butt joint as shown in **Figure 1**. Alternatively, the rod can be installed through the middle of the panel, as shown in **Figure 2**. For installation at mid-span locations or at interlocking joints, apply 3M Fire Barrier CP 25WB+ sealant at the penetration points at the top and bottom of the panels. Maintain a max. of 5 ft. oc ceiling channel spacing.

B. **COVER TRIM** – After insulated metal panel butt joints are compressed against packing material, install 4 in. wide, 26 GA cover trim piece spanning the unexposed surface butt joint.

C. **SQUARE CEILING PLATES** – Install 12 GA galvanized steel, 4 in. square ceiling plates through the threaded rod. Secure ceiling plate and cover trim using 1/4-14 x 1 in. long hex-head Stitch Tek fasteners. For installation at mid-span locations, apply a continuous bead of Kingspan's non-skinning butyl sealant on the underside of the ceiling plate along its perimeter. Install four fasteners at each ceiling plate.

D. **CEILING CHANNEL** – Install 12 GA galvanized steel ceiling channel to the underside of the insulated metal panel butt joint and in line with mounting attachment threaded rod locations. Apply two continuous beads of



Kingspan's non-skinning butyl sealant on the topside of the ceiling channel to set panel edges onto. Secure using 1/4-14 x 1 in. long hex-head fasteners spaced 12 in. oc. Secure ceiling channel cover trim using #10 x 3/4 in. tek screws, spaced 12 in. oc along the length of the cover trim, one fastener on each side of the butt joint through the insulated metal panels.

- E. CHANNEL PACKING MATERIAL – Install 1-1/2 in. x 6 in. wide strips of 8 pcf density mineral wool on the underside of the ceiling channel prior to installing the butt joint trim.

- F. CEILING CHANNEL COVER TRIM – After installing the channel packing material, install 26 GA butt joint trim pieces over the channel packing material and ceiling channel (Item 7D). Overlap joints min. 3 in. and secure using #10 x 3/4 in. long hex-head Stitch Tek fasteners spaced 12 in. oc.

This Design Listing is intended to provide guidance for on-site verification of the installation of system components and shall not be used in place of the manufacturer's published installation instructions. The manufacturer is responsible for providing installation instructions and requirements that ensure compliance with the system as tested and evaluated by Intertek. Installation must comply with this Design Listing, the manufacturer's installation instructions, and the applicable Code. In the event of conflict, this Design Listing governs.

Compliance of the assembly described in this Design Listing with the referenced standard(s) is contingent upon verification that the field-constructed assembly is consistent with the assembly described herein. Intertek-certified products may be verified by the authorized Intertek label. Products not bearing the Intertek label shall be verified by the Authority Having Jurisdiction as meeting the specifications stated herein.

This Design Listing is provided pursuant to the agreement between Intertek and its Client. Intertek's responsibility and liability are limited to the terms and conditions of that agreement. Intertek assumes no liability to any party other than the Client, in accordance with the agreement, for any loss, expense, or damage arising from the use of this document. Only the Client is authorized to permit copying or distribution of this Design Listing, and only in its entirety. Partial reproduction or distribution of excerpts is not permitted.

Refer to the listing report in the Directory of Building Products (<https://bpdirectory.intertek.com>) for the applicable edition of the referenced standard(s).