
## Design No. CEJ 215P

## PERIMETER FIRE BARRIER SYSTEM

T-Rating - 1/4 hr.

F-Rating - 2 hr

Rated for ± 15% movement

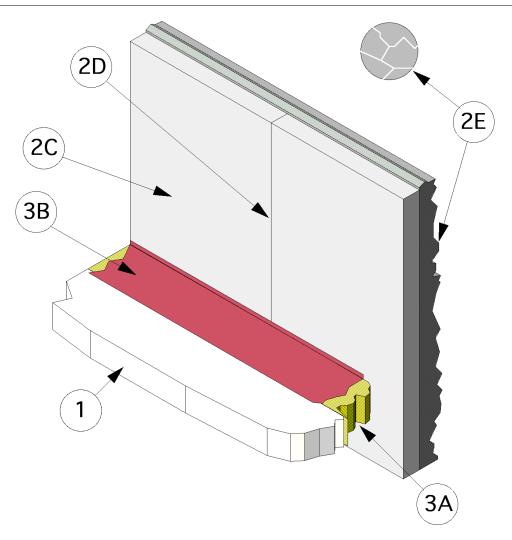

- 1. CONCRETE FLOOR ASSEMBLY: Two-hour rated concrete floor assembly made from either lightweight or normal weight concrete with a density of 100-150 pcf, with a min. thickness of 4-1/2-in. at the joint face. Overall slab thickness may vary to accommodate various blockout depths (longitudinal recesses) formed in the concrete, to house the architectural cover plate. The blockout width may also vary without restriction.
- CURTAIN WALL ASSEMBLY: The concrete tilt-up curtain wall assembly shall

incorporate the following construction features:

A. Panel Mounting Attachment: (Not Shown) Attachment of the concrete tilt-up wall panels to the structural framing shall be according to the curtain wall manufacturer's instructions. If required, mounting attachments to the floor slab shall be connected to the joint face of the floor slab. Max. distance between mounting attachments shall be 10 feet.

- B. Structural Framing: (Not Shown) Structural framing members shall be according to the curtain wall system manufacturer's requirements. Aluminum structural framing must be completely covered by concrete panels.
- C. Tilt-up Panels: Tilt-up concrete wall panels, min. 2-1/2 in. thick, reinforced lightweight or normal weight (100 - 150 pcf). Install panels to structural framing according to the curtain wall system manufacturer's requirements.
- D. Concrete Panel Joint: Vertical and horizontal concrete panel butt joints can be either Flush type (butt joint) or key way type (tongue and groove). Concrete panel edges at butt joints must be in contact with each other. If required, the surface of the panel joints can be sealed with gaskets or sealants.
- E. Curtain Wall Insulation: (Not Shown Optional) When curtain wall insulation is used, the perimeter joint treatment must be installed before the insulation. Insulation may be butted to top and bottom of perimeter joint treatment but not deform the perimeter joint treatment. Either mineral wool\*\* or fiberglass batt insulation\*\* may be used. (\*\* Listed with Omega Point Laboratories)
- F. Impaling Pins: (Not shown) When curtain wall insulation is used, use impaling pins when required by manufacturer's instructions. The pins shall be located, sized and installed according to the curtain wall system manufacturer's guidelines.
- G. Exterior Curtain Wall Surface: Use a min. 2-inch thick stone veneer.
- 3. PERIMETER JOINT PROTECTION: The perimeter joint (linear opening) shall not exceed an 8 in. nom. joint width (joint width at installation) and the perimeter joint treatment shall incorporate the following construction features:
  - A. Packing Material: Use a min. 4 in. thick, 4 pcf density, mineral wool batt insulation\*\* installed with the fibers running parallel to the slab edge and curtain wall. (\*\* Listed with Omega Point Laboratories) The packing material shall be compressed 50% in the nominal joint

- width. Compress the batt insulation into the perimeter joint such that the top surface of the batt insulation is flush with the top surface of the concrete floor slab. Splices (butt joints) in the lengths of mineral wool batt insulation are to be tightly compressed together. Reference the Introduction to Fire Resistive Joint Systems Section of this Directory for more details on how to determine the cut width of the insulation to be installed in the nominal joint width, and how to determine the compressed percentage of a known insulation width installed in a known nominal joint width.
- B. Fill, Void or Cavity Material: Liquid is to be applied, (sprayed, brushed, or painted) to cover the exposed surface of the mineral wool installed in the perimeter joint. Apply a min. dry film thickness of 1/16 in. and overlap the material a min. 1/2 in. onto the adjacent curtain wall assembly and concrete floor slab assembly. If the spraying process is stopped and the applied liquid cures to an elastomeric film before process is restarted, then overlap the edge of the cured material at least 1/8 in. with the spray.

## **Listed Manufacturer:**

Johns Manville --

**Joint Sealant** 

Spray

Johns Manville Firetemp SE

Johns Manville Firetemp SI

- C. Support Clips: (Not Shown) Required when using 24 GA Support Angle (3D), use standard Z-shaped clips that are min. 20 GA galvanized steel with the following nom. dimensions: 1 in. wide by 3 in. high with a 2 in. upper leg and 3 in. lower leg.
- D. Support Angle: (Not Shown) Install a mechanically fastened to the interior of the concrete panels at the mid point location of the packing material. When 16 GA support angles are used Z-clips (3C) are not required.
- \*\* Cycling: Before testing, the spliced, test specimen was cycled 500 times at 30 cpm in accordance with ICBO ES AC 30 (Jan. 1997) and ASTM E 1966.