




Gaco, a division of Holcim Solutions and Products US, LLC
Design No. GWL/FI 30-01
Non-Load Bearing Wall System
Gaco 183M and GacoOnePass F1850
NFPA 285

Rating: Meets Conditions of Acceptance

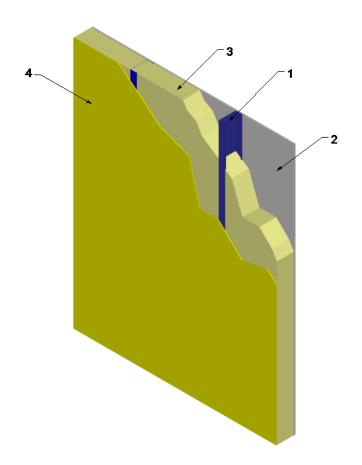

1. WALL FRAMING: Install 3-5/8 in. deep, 20 GA galvanized steel studs spaced max. 24 in. on center (oc). Secure steel studs to 3-5/8 in., 20 GA top and bottom track (not shown) using #8, 7/16 in. long, self-tapping, pan-head framing screws.

OPTIONAL – Install nominal 2 x 4 fire-retardant treated wood studs, complying with the definition and requirements prescribed in the

International Building Code. Studs shall be spaced max. 16 in. oc.

2. GYPSUM BOARD: Install 5/8 in. thick Type X gypsum board with long dimension perpendicular to studs (Item 1). Attach to steel studs (Item 1) using #6, Type S, 1-1/4 in. long, self-tapping, bugle-head screws. Attach to wood studs (Item 1) using #6, 1-5/8 in. long, coarse thread, bugle-head screws, or use #13, 1-5/8 in. drywall nails.

Date Revised: February 19, 2025 Page 1 of 2 Spec IDs: 32871, 35477



Division 07 – Thermal and Moisture Protection 07 21 00 Thermal Insulation 07 21 19 Foamed-In-Place Insulation

Fasteners for fire-retardant treated wood studs shall be of hot-dipped zinc-coated galvanized steel, stainless steel, silicon bronze, or copper.

Space fasteners 8 in. oc around perimeter and 12 in. oc in the field.

A. JOINT TAPE AND COMPOUND — (Not Shown) Apply a level 2 finish of vinyl or casein, dry or premixed joint compound applied to the following elements: Apply to face layer of gypsum board (Item 2) in two coats to all exposed fastener heads and gypsum board joints. Embed min. 2 in. wide paper, plastic, or fiberglass tape in first layer of compound over joints in gypsum board (Item 2).

3. INSULATION:

CERTIFIED PRODUCT: Gaco 183M or GacoOnePass F1850 Spray Polyurethane Foam Insulation

Spray-apply a nominal 3-5/8 in. thick layer of either Gaco 183M or GacoOnePass F1850 at their nominal densities of 2.5 pcf and 2.1 pcf, respectively, to completely fill the steel stud (Item 1) cavity.

4. EXTERIOR SHEATHING: Install 5/8 in. thick, GP DensGlass® Gold Exterior Sheathing to the exterior side of steel studs (Item 1). Install sheathing with long dimension perpendicular to studs. Attach to steel studs using #6, Type S, 1-1/4 in. long self-tapping, bugle-head screws. Attach to wood studs (Item 1) using #6, 1-5/8 in. long, coarse thread, bugle-head screws, or use #13, 1-5/8 in. drywall nails.

Fasteners for fire-retardant treated wood studs shall be of hot-dipped zinc-coated galvanized steel, stainless steel, silicon bronze, or copper.

Space fasteners 8 in. oc around perimeter and 12 in. oc in the field.

Consult the listing report on the Directory of Building Products (https://bpdirectory.intertek.com) for the edition of the standard(s) evaluated.

Compliance of the assembly described in this Design Listing with the referenced standard relies on verification that the assembly constructed in the field is consistent with that described herein. Intertek certified products may be verified by the approved Intertek label; other products must be verified by the Authority Having Jurisdiction as meeting the specifications stated herein.

Date Revised: February 19, 2025 Page 2 of 2 Spec IDs: 32871, 35477